



Installation Instruction For W2W Flooring

The instructions below cover most installation procedures. It will help you to realize a beautiful and durable floor.

The installation of texlyweave® w2w must be performed by a professional with experience with woven vinyl flooring covering.

Check each roll for visual defects before installing. Visible faults should be reported before cutting or installing. Any installation of material implies any quality acceptance. If the material is deemed defective, texlyweave® will replace it. The liability is limited to replacing defective material only, and not respond liable for the cost of removal or reinstallation.

- 1.) Don't cross-pile the rolls to avoid any pressure trace.
- 2.) Keep the rolls on a flat surface to avoid damage. Do not place heavy objects on the rolls or beneath the rolls.
- 3.) Don't roll or fold the texlyweave® w2w face, as it will cause wrinkles and damage the surface.

- 4.) At least 48 hours before the installation, the texlyweave® tile must be brought into the set area to acclimate the temperature, not below 16, and the relative humidity should not exceed 65%.
- 5.) Unroll and smooth out wrinkles allowing texlyweave® w2w rolls to relax at least 24 hours before installation.
- 6.) texlyweave® w2w should be installed after all other works have been completed, and floor protection should be covered until just before use to avoid soiling and damage.
- 7.) Verify that the reference product is identical to the order and check for similar batch numbers. (Batch No.)

Substrate Floor

texlyweave® w2w should never be installed on top of an old floor covering. Appropriate preparation is essential.

The substrate floor must be clean, dry, firmly secured, and free of release agents and cracks to enable perfect fitting.

The surface level tolerances of the subfloor must also be considered to ensure the finished aesthetic appearance and lasting results.

When fitting for the first time on a cement floor, the joints, holes, and height differences in the floor must be filled with firm spackle.

The entire subfloor should then be leveled with self-levelling, Low-tension spackle 24 hours before installation.

The subfloor must always be smoothed, grinding, vacuumed, and primed when laying on an anhydrite or calcium sulfate floor for the first time.

Separating layers, fragments of paint, as well as dust must be removed before starting the laying process.

The surface should be swept, vacuumed, and damp mopped to remove soils that may contaminate or compromise the installation. It must be cleaned and durably dry, free of cracks, dust-and wax-free, and pressure-resistant.

Ensure the concrete's moisture is under 2% or a high vapor barrier is applied before installation.

A primer should be treated on porosity concrete. Cracks and fissures should be filled before the substrate is glue treated.

Make sure of the pH condition of the concrete under 9.

texlyweave® w2w could be installed over heating floors, so the temperature does not exceed 30 degrees. Ensure the heating system is off during installation since a heated bed will dry out the adhesive prematurely.



Installing texlyweave® w2w

Installation

Only rolls with the same lot number may be processed to ensure complete uniformity in color and aspect together.

All rolls must be installed in the same direction; look at the arrow on the back.

If you are unsure of anything, please contact us before installing.

Installing condition

Installation can only be started if the following conditions are met: A soil temperature of at least 15, a temperature between 18 and 23, and a relative humidity not above 75%.


Seams

Limit the number of seams to a minimum. Please don't install seams near the entrance. Avoid head seams. If this cannot be prevented, use transition profiles. texlyweave® is woven with yarn, of which the core is made of white fiber. During the cutting of the seams, these fibers sometimes up; these fibers will break and disappear automatically in use. You speed this up by rubbing it with a damp cloth.

If a watertight installation is desired, the seams can be cold-welded.

Double cut

All designs in the collection are all-over designs that can be double-cut. The blade of the utility knife should be very sharp and regularly changed. Please take a look at the the picture below. The adjoining length shall be laid under the straight-cut edge so that the overlap between the two is about 2-3cm. Align the two sizes so that the fill direction of the texlyweave yarns is straight across the seam.

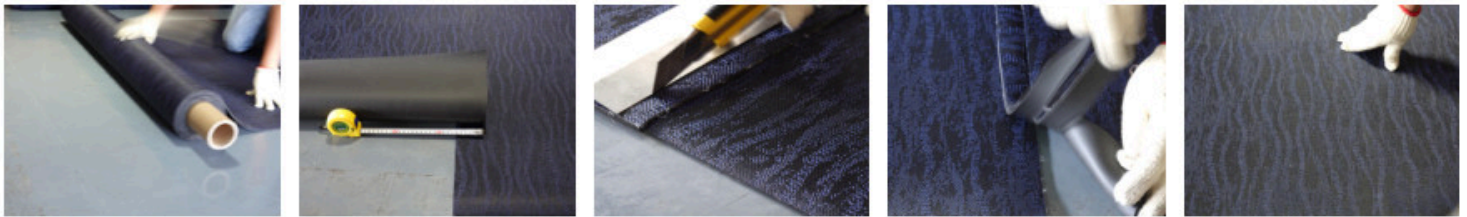

Installing application

Fold back the two lanes in length, over half their width. Drag a straight line on both sides as a starting point for applying the adhesive.

Spread the adhesive evenly with trowels recommended for the type of installation. Use caution not to crease the texlyweave®. Allow adhesive time to tack up. The length of time depends on the installation site condition. The adhesive should be sticky to the touch but will not transfer to the finger. Do not let the glue dry completely. Lay out the flooring into the cement, ensuring the edge aligns with the drawn line.



Lay the flooring into the wet adhesive and rub it with a beam of cork or roller, from the middle of the lane, at an angle of 45, to the side; to remove all air bubbles. Take care of perfectly flat seams. See the picture below:

Recommended Adhesive

PSA - Pressure-sensitive adhesive



Henkel Aquence LA 3141

Datasheet



Uzin KE2000 S

Datasheet

Contact adhesive



Henkel Thomsit K 188 E

Datasheet



Uzin WK222

Datasheet

Attention:

Some white fibers may appear at the seams. These will spontaneously break off during use. texlyweave® is the polyester yarn core instead of fiberglass to avoid broken fiberglass in the room. A low temperature of about 70 hairdryer breezing could curl the fiber and seal it. The total move-in may only be allowed 24 hours after installation; this assures that the adhesive has hardened sufficiently. Wet cleaning is permitted 72 hours after installation.

Important points:

Sharp objects can damage texlyweave® irreparably. Avoid this appropriate using protection on the floor, and be sure not to use them to remove stains. Always protect the floor when moving furniture. Lift the furniture or use pads. It is best to protect the floor covered by a plastic sheet when using castor chairs. In addition, the castor chairs must always be fitted with rugged wheels, with a minimum diameter of 50mm and a width of at least 20mm. Contact rubber materials (e.g., tires, floor mats.) should be avoided. Prolonged contact will stain texlyweave® irreparably. In such situations, the rubber is replaced with another plastic, or protection is applied. Always use epoxy or comparable waterproof adhesives if texlyweave® rolls are installed outdoors. texlyweave® rolls are suitable for underfloor heating. It is necessary to cover the floor covering immediately after installation to avoid prevent damage, especially if third parties do subsequent work.

The Warranty For Complete Or Partly Compensation Of Complaints by Dragonshine Will Be Void If the Above Installation Instructions Are Not Strictly Respected.



we challenge the norms of weaving

Informed by continuous contact with designers and professionals in the textiles and interiors industry, we create, manufacture and distribute solutions to enhance new surface comfort of the spaces in which people live and work. **texlyweave®** products are technically sophisticated, sensitive, and hard-wearing. Their hallmark is the textile in which they are from wall to floor: **texlyweave®** is woven in our workshop in China in a palette of hundred colors. Since 2002, it has been our pride and delight to play our part in developing quality furniture and interior in China, Asia, Europe, the US, and beyond.

our woven vinyl from wall to floor with an exclusive **texlyweave®** creation!

The above information is based on our experience and careful investigations. The variety of associated materials, constructions, and working conditions cannot be individually checked or influenced by us. So, your work's quality depends on your professional judgment and product usage. If in doubt, conduct a small test or obtain technical advice. Observe the installation recommendations of the related information and knowledge. The publication of this Product Data Sheet invalidates all previous product information.

We reserve the right to make changes within the scope of technological advancement without prior notice.

此处的资料是根据我们实际掌握的知识和经验而提供的，因使用不通的材料以及工作条件的改变草果了我们的控制范围，我们郑重建议进入深入细致的实验并与我们的工作人员协商，对于以上资料，我们不接受任何相关责任。

我司有权根据情况对以上内容进行修改。

更多資訊，謹請垂詢！

*For more information, please contact us at
info@dragonshine.net!*

